

FT Installation in Stewart Early Production with 8 pin socket



F 3, 7 and 9 or FT
Old Stewart & Bowser
production with 8 pin socket
Kit #691-1226

Decoder is LokSound Select Micro

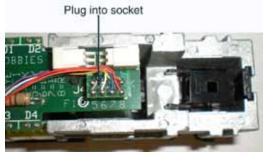

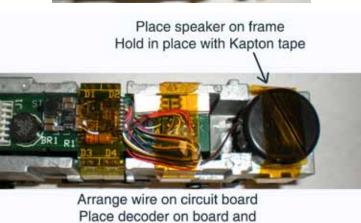

tape in place with Kapton tape

FT and F Solder the 2 brown wires to the speaker

F-3, F-7 or F-9 installation



