

# VO-1000 Instructions

## To Remove Body:

Remove the couplers from both ends. Carefully pull the back handrail out of cab. Hold the plastic deck by the rear steps and wiggle the cab. The cab will separate from the deck. Carefully pull the cab away from the deck. Light wires are attached as be very carefull. The body will follow the cab.

## Oil:

Light model train oil may be used. Oil the motor where the shaft passes through the motor bearings. This is between the flywheel and the motor. Oil the worm shaft where it passes through the motor bearings.

## DCC installation:

Use the DCC module of your choice. Sorry we do not recommend a brand.

**End Railing and Coupler Lift bar** press into place.


## Southern Pacific and Pacific Electric Trolley poles:

Holes are in the plastic body. Do not drill new holes. they are small and you may need a magnifier to see them.

Look at the photos below to see where they are on the body.

The brass platform has bend notches on one side. Bend the legs so that this notch is inside. They bend very easily.

Press all parts into the holes. A very small amount of super glue will hold the parts. VERY SMALL AMOUNT

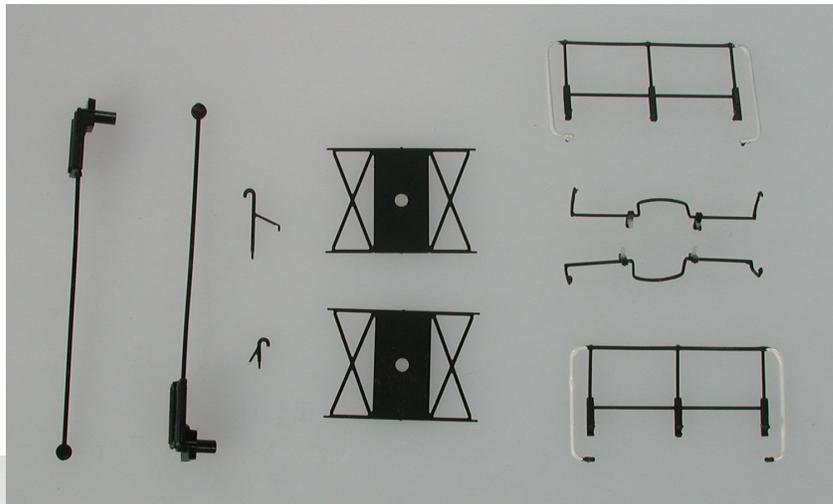

Bend Notches

